At this time, please update your machine only if you have 64 bit windows running.

To do the install


- 1. Disconnect the EVB.
- 2. Run the driver installer located in the above directory "SilabsCypressDriverInstaller.exe" Right click and run as Administrator.
- 3. In the installer(s) You'll find the familiar red window is now gone, replaced by a calming grey window.




- b. You can click the checkbox to never be warned again (security cert is installed)
- c. Click Install
- 4. Reconnect the EVB

a.


Note: You can confirm your driver has updated properly by looking at the properties in the device manager after turning the device back on.

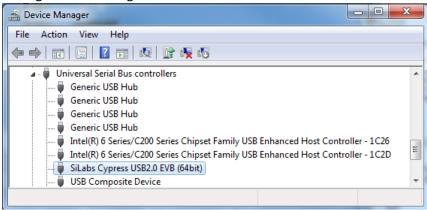

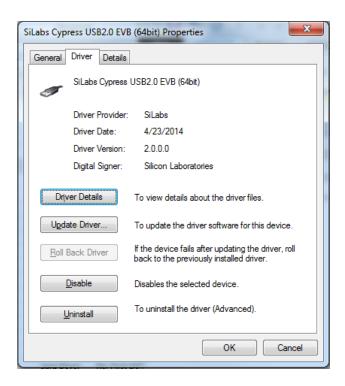


If the driver is not digitally signed at this point, press the Update Driver button to refresh the screen.


You will get the following for several minutes:

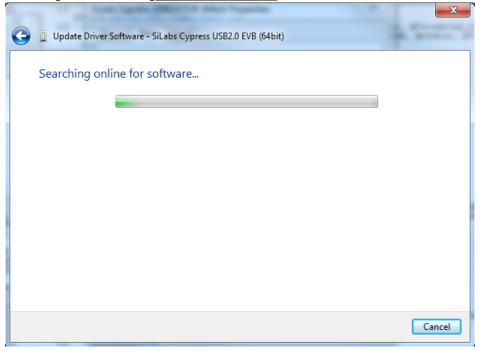


Then, after a (long) while...

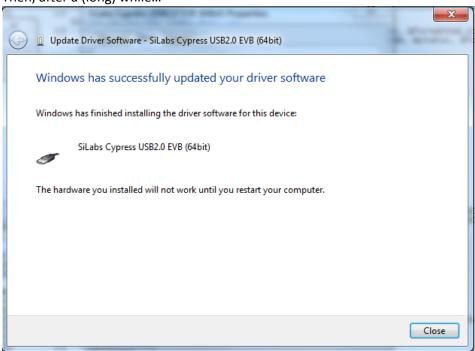

It now shows 'Silicon Laboratories' under 'Digital Signer':

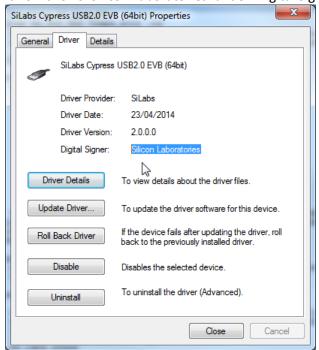

Moving the mouse over the 'Silicon Laboratories' text, it still shows 'Not digitally signed':

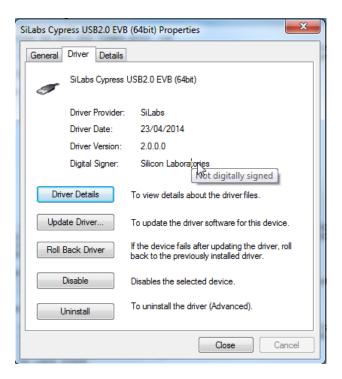

So, follow the request to restart your computer to complete the changes:



Then you get it all ok:

